
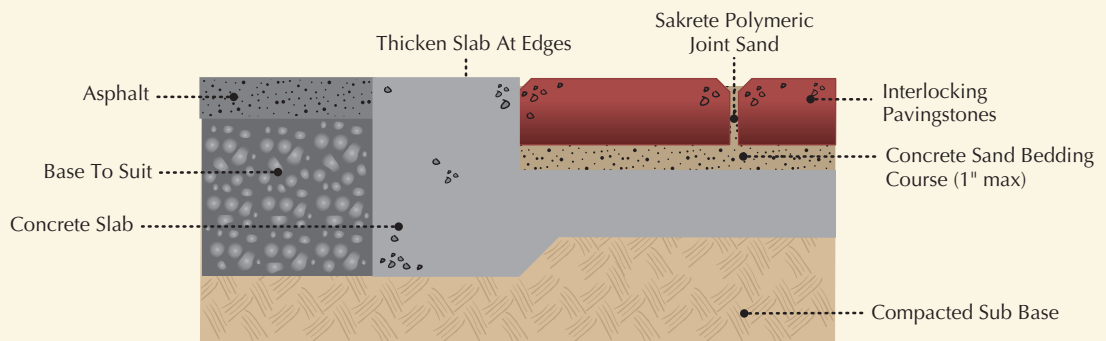



# Vehicular Edge Treatment Variations

## For Working Adjacent To Asphalt-Concrete

1. Edge treatment should be as straight as possible to compliment the alignment of paving stones.
2. All edge treatment must be vertical to allow a close fit.
3. When new concrete is planned adjacent to paving stones, the relief tool should be as small as possible (1/4 inch to allow a close fit).

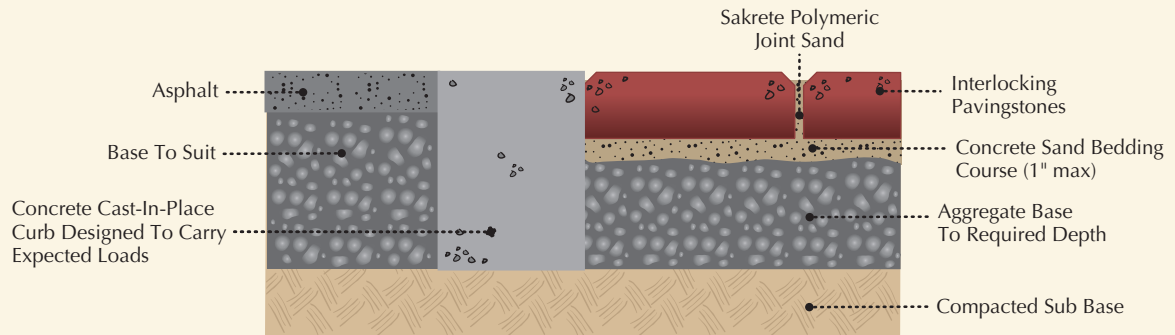

## Relief Tooling

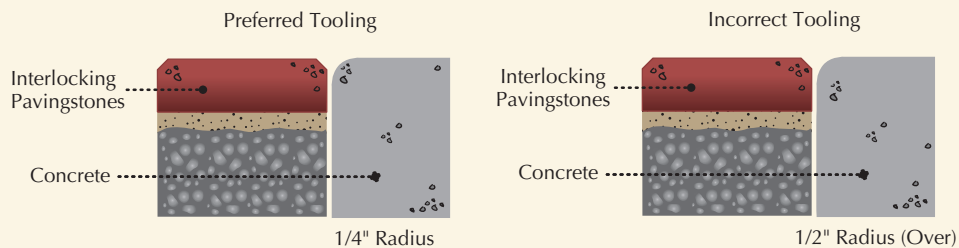

## Notes:

Base design section should be by a soils engineer.

All surfacing utilities should be banded in concrete to set stones against.